




C Pillar Reinforcing Plate Instruction Sheet



From the underside of the headlining, measure down 30cm and mark position in centre of C pillar

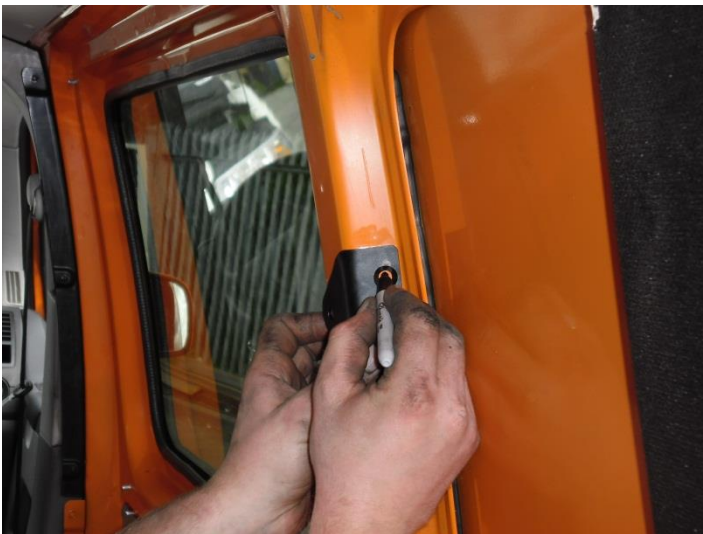

Offer up the Bebb C Pillar Plate to the 30cm Mark and mark the other two holes in the plate on the pillar



Pilot drill the 3 holes with a pilot drill and then drill them out to 10mm x 3 holes



Using your RIVNUT gun, tighten the 2 x M8 and the 1 x M10 RIVNUTS as provided in the kit. All RIVNUTS have the same OD hence all three holes are drilled to 10mm



This is what you will end up with in the C Pillar – 3 x RIVNUTS ready to take the Bebb Plate